


## 6000/7000/7000CC Series No-Slack® Drop Handle

**Important:** This handle cannot be used with air actuated fifth wheels.


This bulletin covers the proper inspection of the No-Slack drop handle. This inspection must be completed after coupling to ensure the fifth wheel is closed. Refer to the illustrations below for details.

### Fifth wheel closed properly

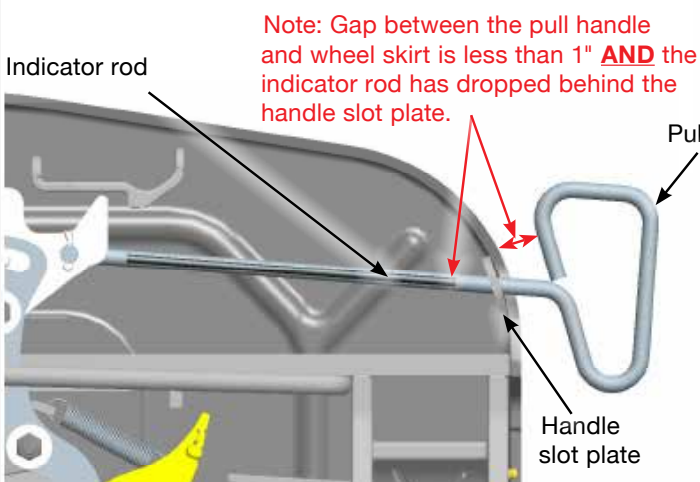


Bottom view


Side view

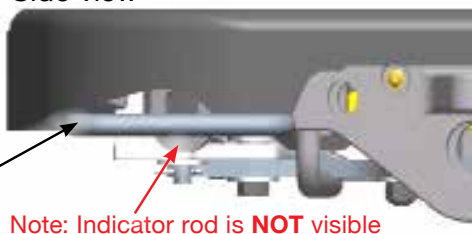

Front view

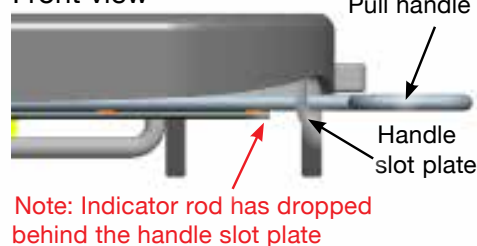

### Fifth wheel not closed properly

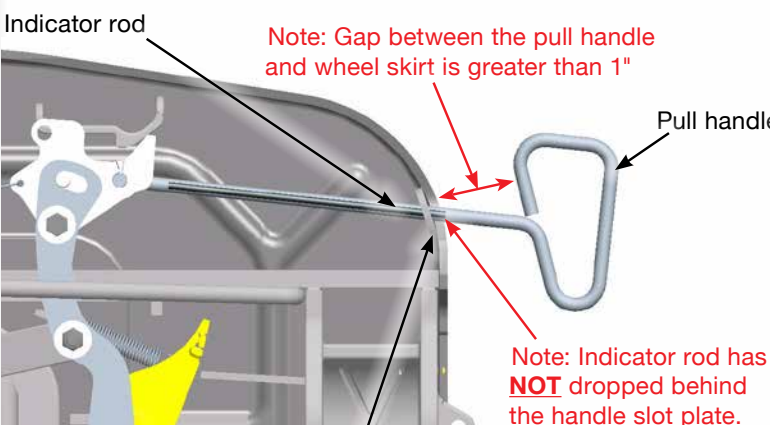

Bottom view

Handle slot plate

Side view



Front view

